6. Exploded View & Parts List

6-1 CW21C73VS8XXEC

You can search for the updated part code through ITSELF web site.
URL : http://itself.sec.samsung.co.kr

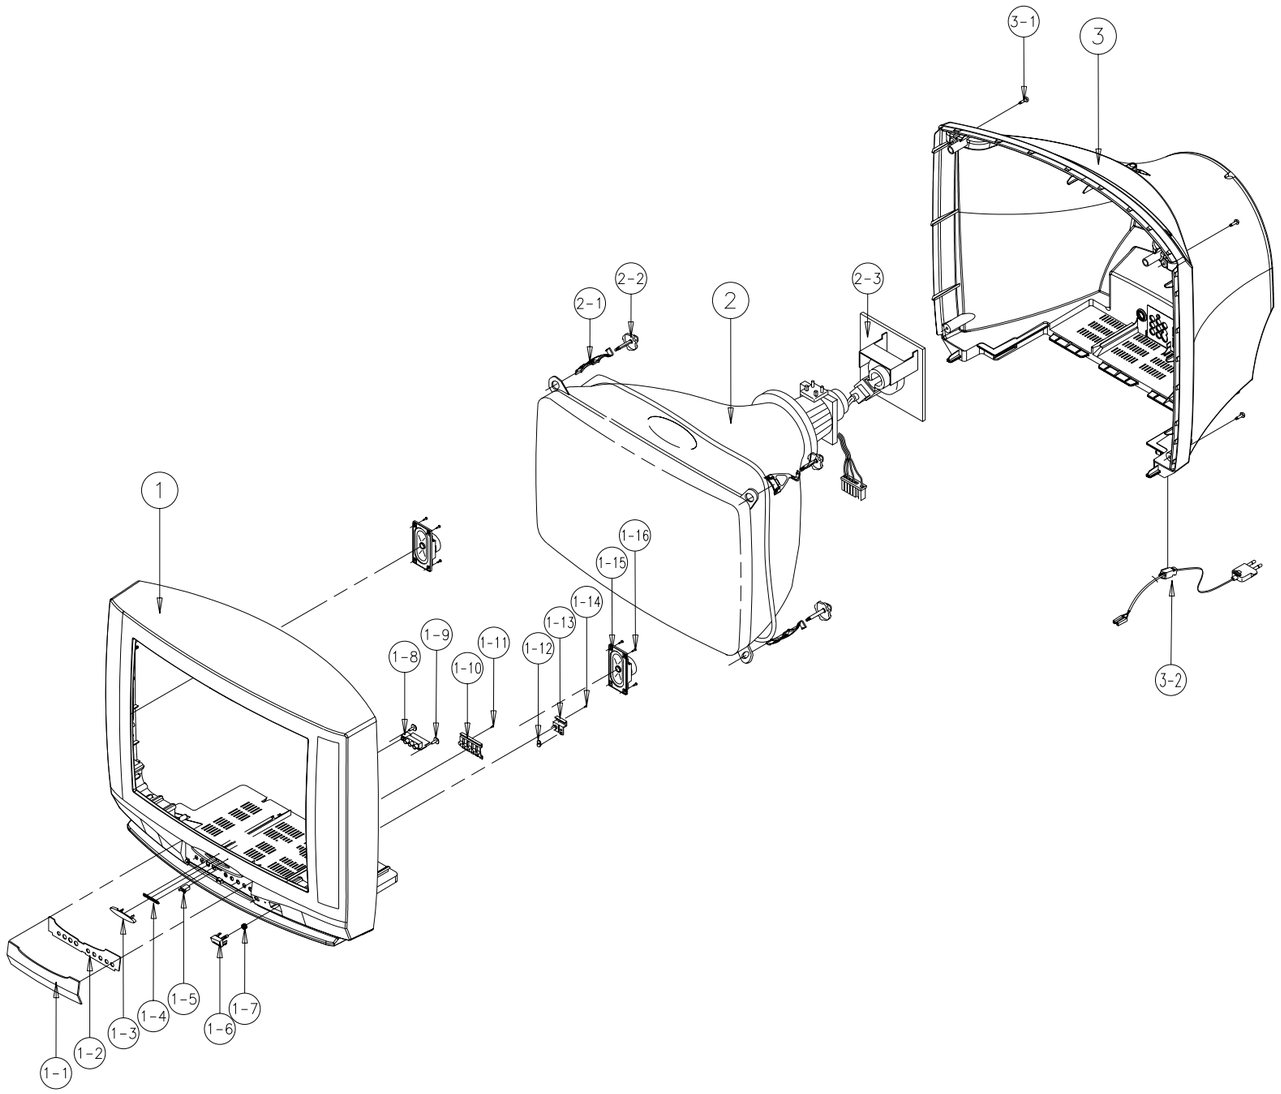

No	Code No	Description;Specification	Q'ty	Remark	S.N.A
1	HA91-04035C	ASSY CABINET FRONT;,21C7,KS3A,VL-1823,SV	1		
1*	AA64-02379F	CABINET-FRONT;21C7D,VL-1823,SV-012P-II,G	1		
1-1	HA64-27006A	DOOR-CONTROL;;21C7,HIPS,HB,SV-012P-II	1		
1-2	AA64-01059B	INLAY CONTROL;21C7,PS SHEET,T0.3,-,-,-,K	1		
1-3	HA64-01058B	DECORATION-COVER;21C7,PC,V0,VIOLET	1		
1-4	AA64-70010B	BADGE-BRAND;-,AL,-,-,L50,-,SILVER,SS R20	1		
1-5	AA61-30001A	LATCH-DOOR;-,-,-,-,-,-,KIFUCO LA701	1		
1-6	HA64-25006A	KNOB-POWER;21C7,HIPS,SV-012P-II,SILVER	1		
1-7	AA61-60003T	SPRING ETC-CS;-,SUS304,-,-,OD7,N5,OD7,-,	1		
1-8	AA95-01557A	ASSY ETC-PCB A/V BOARD;,XX44-3C,KS3A	1		
1-9	6003-001024	SCREW-TAPTITE;RWH,+,B,M4,L12,ZPC(YEL),SW	2	AV+CF	
1-10	AA64-02470B	KNOB CONTROL;21C7,HIPS,HB,SV-012P-II,GRY	1		
1-11	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	KC+CF	
1-12	AA64-02465A	INDICATOR LED;21C7,ACRYL,CLR	1		
1-13	AA64-02455A	WINDOW REMOCON;21C7,PC,VO,VIOLET	1		
1-14	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	WR+CF	
1-15	3001-000280	SPEAKER;5W,16OHM,90DB,150HZ	2		
1-16	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	8	SPK+CF	
2	AA94-11633A	ASSY CRT;,+450MG,21,ITC,A51EFS83X191,9	1		
2-1	AA65-30113A	CLAMPER CORE-D,COIL;-,NYLON 66,V2,-,BLK,	4		
2-2	AA60-10050Q	SCREW-ASSY;-,SWRCH18A,M5,L26.5,HH,+,WC,-	4	CRT+CF	
2-3	3704-001105	SOCKET-CRT;11P,20PI,26.5PI,NI,-	1	V999S	
3	HA64-02364B	CABINET-BACK;21C7,VL-1823,GRAY	1		
3-1	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	4	CB+CF	
3-2	AA96-01126A	ASSY POWER CORD;DP,AA39-10001G,CP2,H/C25	1	P/CORD	

6-2 CW28C73VS8XXEC

You can search for the updated part code through ITSELF web site.
URL : http://itself.sec.samsung.co.kr

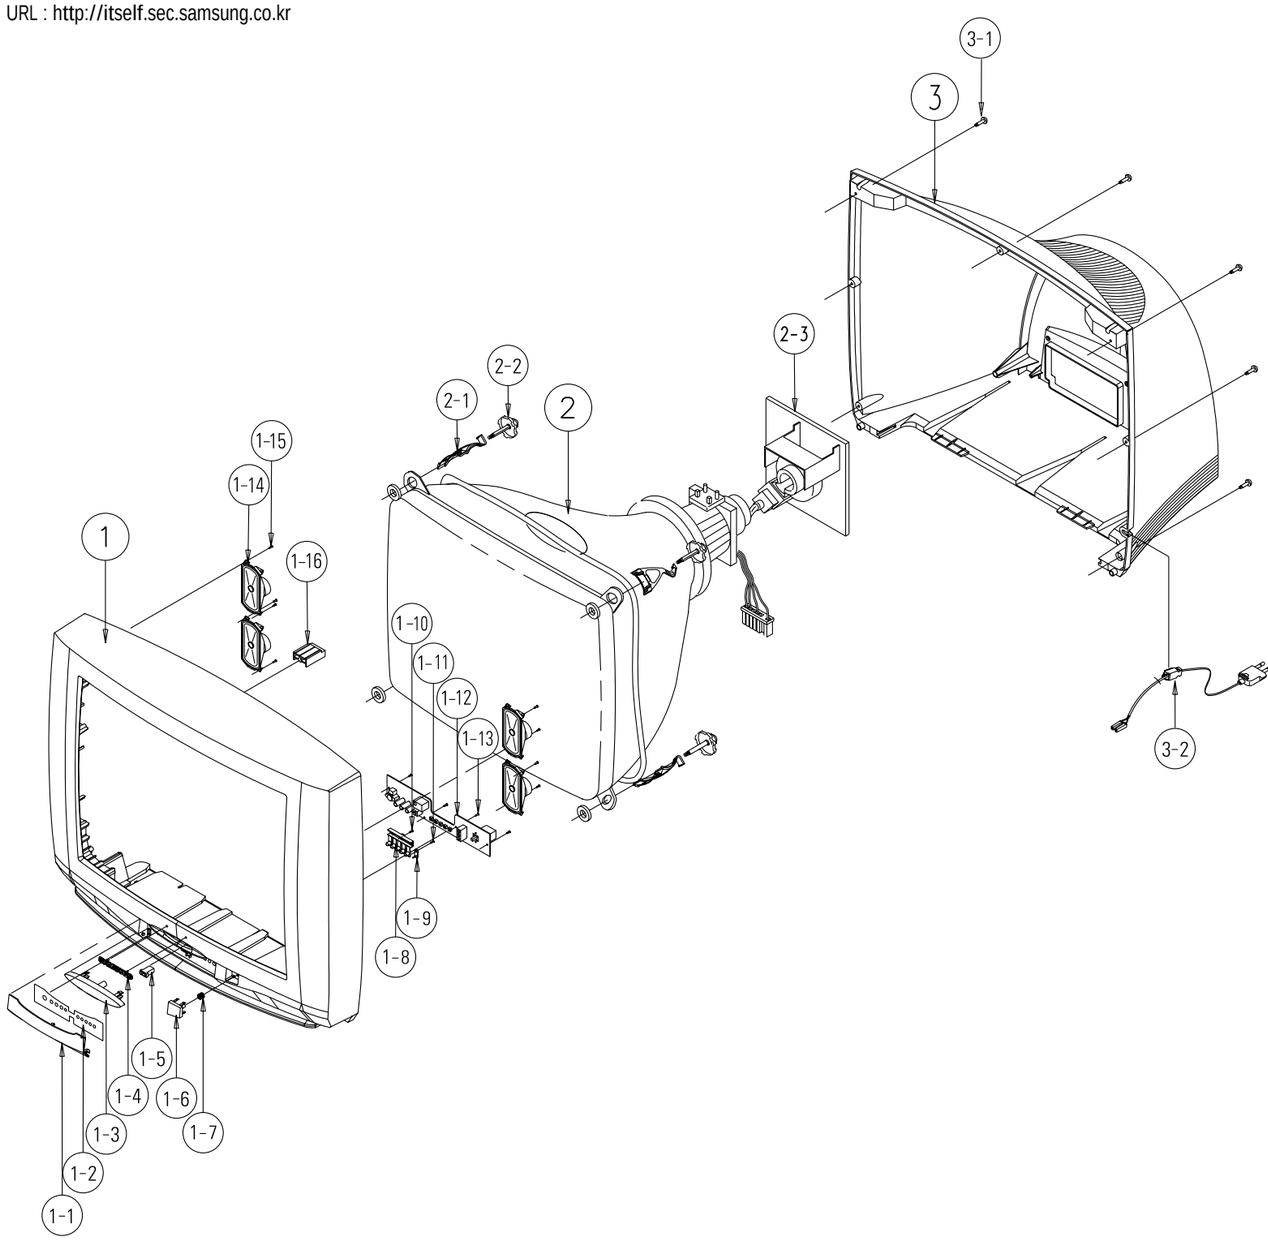

No	Code No	Description;Specification	Q'ty	Remark	S.N.A
	AA39-00241A	LEAD CONNECTOR-ASSY;,6P,500MM,YBNH250-06	1	CN501A	
1	HA91-00879D	ASSY CABINET FRONT;28C7D,VDS,SV-011P-II	1		
1*	AA64-02420D	CABINET-FRONT;28C7D,HIPS,HB,SV-012P-II,G	1		
1-1	HA64-27016A	DOOR-CONTROL;;28C7,HIPS,HB,SV-012P-II	1		
1-2	AA64-00189B	INLAY-CONTROL;28C7,PS,T0.3,-,-,BLK,S51A	1		
1-3	AA64-00190A	WINDOW-REMOCON;-,28C7,-,PC,-,VIOLET,-	1		
1-4	AA64-70117B	BADGE-BRAND;-,AL,-,-,L65,R2000,SILVER,SS	1		
1-5	AA61-30001A	LATCH-DOOR;-,-,-,-,-,-,KIFUCO LA701	1		
1-6	AA64-02509B	KNOB POWER;28C7,HIPS,HB,SV-012P-II,GRY	1		
1-7	AA61-60003T	SPRING ETC-CS;-,SUS304,-,-,OD7,N5,OD7,-,	1		
1-8	AA64-02482A	KNOB CONTROL;28C7,HIPS,HB,GRY	1		
1-9	AA64-00191A	INDICATOR-LED;28C7,ACRYL,-,CLR,-,-,-	1		
1-10	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	KC+CF	
1-11	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	IND+CF	
1-12	AA95-01525A	ASSY PCB CONTROL;,KS3A,28C7,50HZ	1		
1-13	6003-001023	SCREW-TAPTITE;RWH,+,B,M3,L10,ZPC(YEL),SW	4	PC+CF	
1-14	HA96-00091B	ASSY-SPEAKER;16##,10W,3001-001005,AA39-2	1		
1-15	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	4	SPK+CF	
1-16	AA61-40010A	BOSS-WING;-,HIPS,-,-,-,NTR,HB	1		
2	HA94-500023	ASSY-CRT;A66EHJ13X38,+450MG,28,ITC,NORM	1		
2-1	AA65-30007A	CLAMPER CORE-D,COIL;-,NYLON-66,V0,-,NTR,	4		
2-2	AA60-10050Q	SCREW-ASSY;-,SWRCH18A,M5,L26.5,HH,+,WC,-	4		
2-3	3704-001105	SOCKET-CRT;11P,20PI,26.5PI,NI,-	1	V999S	
3	HA64-02431C	CABINET BACK;28C7,VL-1823,GRY	1		
3-1	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	7	CB+CF	
3-2	AA96-01126B	ASSY POWER CORD;DP,AA39-10001G,CP2,H/C40	1		

6-3 CW28C95VS8XXEC

You can search for the updated part code through ITSELF web site.
URL : http://itself.sec.samsung.co.kr

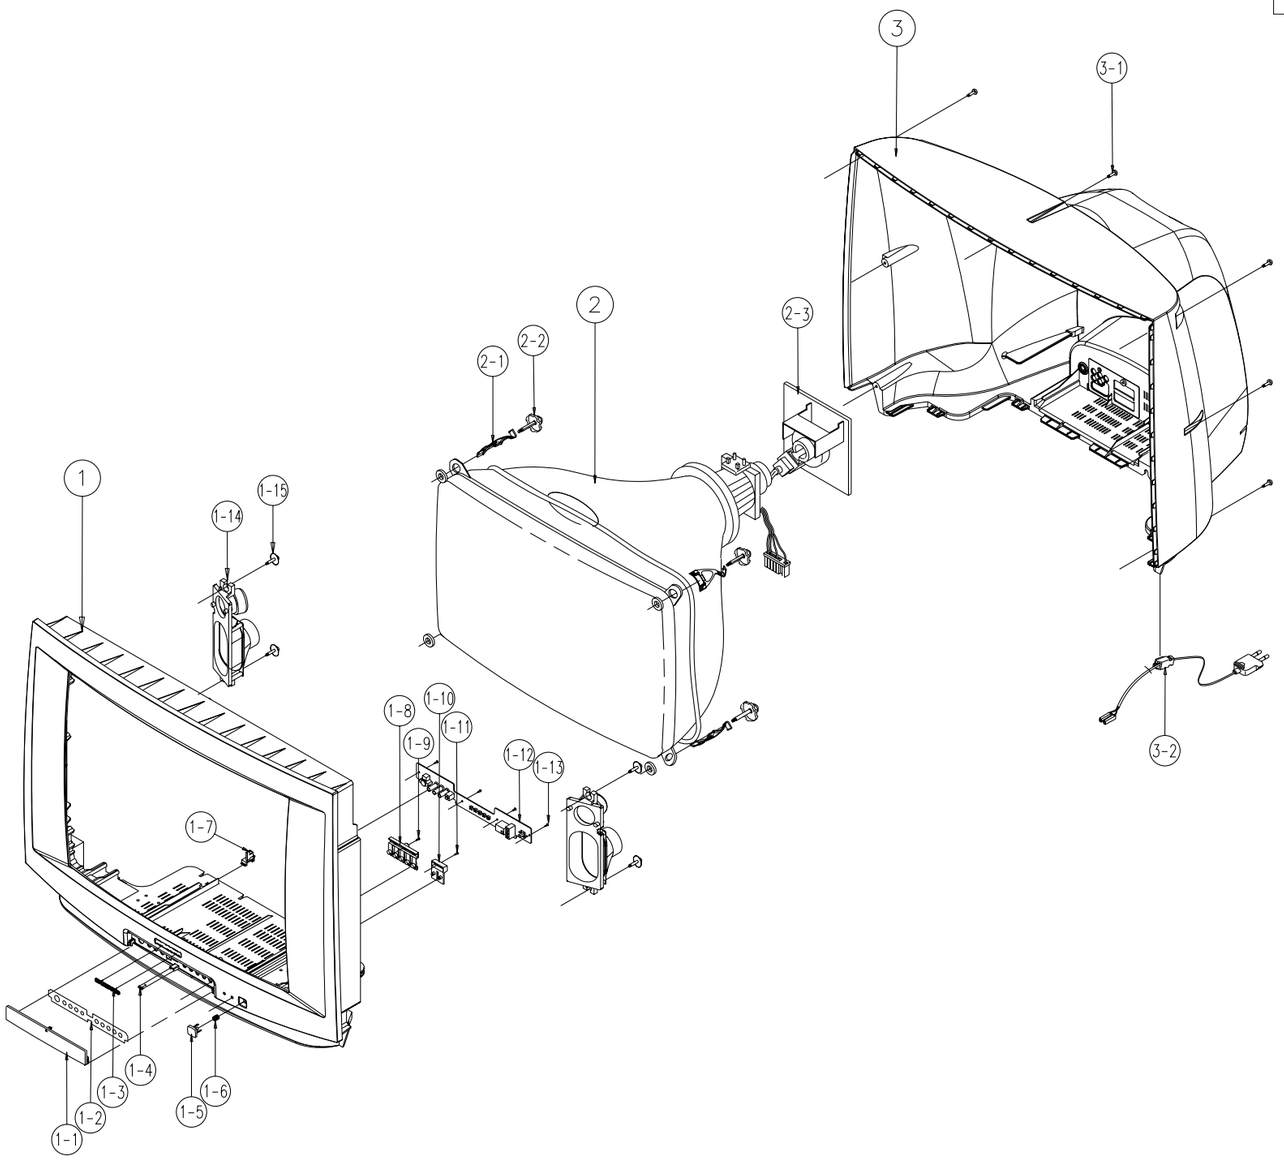

No	Code No	Description;Specification	Q'ty	Remark	S.N.A
1	HA91-00877M	ASSY CABINET FRONT;,28C9DH,VDS,COR-PROT,	1		
1*	AA64-02413C	CABINET-FRONT;28C9,VL-1823,SV-012P-II,GR	1		
1-1	AA64-02587D	DOOR CONTROL;28C9H,HIPS,SV-012P-II,DBS,S	1		
1-2	AA64-01564B	INLAY-CONTROL;28C9,PS SHEET,T0.3,-,-,-,K	1		
1-3	AA64-70117B	BADGE-BRAND;-,AL,-,-,L65,R2000,SILVER,SS	1		
1-4	AA61-30001A	LATCH-DOOR;-,-,-,-,-,-,KIFUCO LA701	1		
1-5	AA64-02506A	KNOB POWER;28C9,HIPS,HB,SV-012P-II,GRY	1		
1-6	AA61-60003T	SPRING ETC-CS;-,SUS304,-,-,OD7,N5,OD7,-,	1		
		STOPPER-PCB;			
1-8	AA64-02479A	KNOB CONTROL;28C9,HIPS,HB,GRY	1		
1-9	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	KC+CF	
1-10	AA64-02463A	WINDOW REMOCON-LED;28C9,V0,VIOLET	1		
1-11	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	WIN+CF	
1-12	AA95-01528A	ASSY PCB CONTROL;,KS3A,XXW7-C9,100HZ	1		
1-13	6003-001023	SCREW-TAPTITE;RWH,+,B,M3,L10,ZPC(YEL),SW	4	CONTRO	
1-14	3001-001005	SPEAKER;10W,8OHM,91DB,140HZ	2		
1-15	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	8	SPK+CF	
2	AA94-07273B	ASSY CRT;A66EHJ13X12,+450MG,28,4:3,100	1		
2-1	AA65-30007A	CLAMPER CORE-D,COIL;-,NYLON-66,V0,-,NTR,	4		
2-2	AA60-10050Q	SCREW-ASSY;-,SWRCH18A,M5,L26.5,HH,+,WC,-	4	CRT+CF	
2-3	3704-000114	SOCKET-CRT;14P,29.1,35.5,SN,ISH09S/BK	1	VA999	
3	HA64-02423B	CABINET BACK;28C9,VL-1823,GRY	1		
3-1	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	7	CB+CF	
3-2	AA96-01127B	ASSY POWER CORD;DP,AA39-10001M,CP2,H/C40	1		